



**File Name:** casio ctk 495 keyboard manual.pdf

**Size:** 2668 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 28 May 2019, 20:20 PM

**Rating:** 4.6/5 from 661 votes.

**Status:** AVAILABLE

Last checked: 16 Minutes ago!

**In order to read or download casio ctk 495 keyboard manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with casio ctk 495 keyboard manual . To get started finding casio ctk 495 keyboard manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# casio ctk 495 keyboard manual

Manual and User Guide for many equipments like mobile phones, photo cameras, motherboard, monitors, software, tv, dvd, and others. This equipment generates, uses and can radiate radio frequency energy and, if not installedIf this equipment does cause harmfulDeclaration of Conformity. Model Number CTK800. Trade Name CASIO COMPUTER CO., LTD. Responsible party CASIO, INC. Address 570 MT. PLEASANT AVENUE, DOVER, NEW JERSEY 07801. Telephone number 9733615400. This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditionsImportant! Please note the following important information before using this product.Carefully check the power cord for breakage, cuts, exposed wire andNever let children use an AC adaptor that is seriously damaged.This mark applies in EU countries only. CASIO Europe GmbH. Bornbarch 10, 22848 Norderstedt, GermanyCongratulations on your selection of the CASIOSymbols. Various symbols are used in this user's guide and onThose symbols along with their meanings are shownSymbol Examples. This triangle symbol means that theThis circle with a line through it The black dot means that theIndications within this symbol are actionsPerform the following steps immediately ifRinse them withLeaving alkaline battery fluid in your eyesContinued use of the product while it isTake the following steps immediately.AC AdaptorAlways makeService Provider.Doing so creates the risk of electric shock.Batteries. Misuse of batteries can cause them to leak,Do not incinerate the product. Never throw the product into fire. Doing so can cause it to explode, creatingWater and Foreign Matter. Water, other liquids, and foreign matterDisassembly and Modification. Never try to take this product apart orDoing so creates theCASIO Service Provider.Dropping and Impact. Continued use of this product after it hasPlastic Bags. Never place the plastic bag the productDoing so creates the risk of suffocation.<http://viveirosrego.com/images/bunn-coffee-machine-manual.xml>

- **casio ctk 495 keyboard review, casio keyboard ctk 495 manual, casio ctk 495 keyboard manual, casio ctk 495 keyboard manual download, casio ctk 495 keyboard manual pdf, casio ctk 495 keyboard manual instructions, casio ctk 495 keyboard manual free.**

Particular care concerning this precautionClimbing onto the product or stand canParticular care concerning this precautionLocation. Avoid locating the product on an unstableAlways grasp the AC adaptor whenRelocating the Product. Before relocating the product, alwaysCleaning. Before cleaning the product, always unplugLeaving the AC adaptor plugged in createsBatteries. Misuse of batteries can cause them to leakConnectors. Connect only the specified devices andConnection of a nonspecified device orLocation. Avoid the following locations for thisDisplay ScreenSound Volume. Do not listen to music at very loud volumesAn incorrectly assembled stand can tip over,Make sure you assemble the stand correctly,Company and product names used in thisHeavy Objects. Never place heavy object on top of theDoing so can make the product top heavy,A wide selection of tones includes stereo piano and synthesized sounds, drum sets, and much more. Other features include digital effects that control the acoustical characteristic of tones.The touch of a button takes you directly to piano tones and piano lessons.The 3Step Lesson System lets you practice at your own pace. The keyboard automatically grades your performances, so youGuidance that appears on the monitor screen helps lead you down the path to music proficiency.Builtin tunes are divided into two groups a Song Bank of 50 tunes with Auto Accompaniment, and a Piano Bank of 50 pianoA selection of rhythms cover rock, pops, jazz and just about any other musical style imaginable.Simply play a chord and the corresponding rhythm, bass, and chord parts play along automatically. One Touch

Presets instantly. With lesson recording you can record as you play along with builtin tunes for later playback. Performance recording lets you record your performances, including Auto Accompaniment, in real time. You can connect your keyboard to a computer, use special CASIO conversion software to convert SMF data you purchase or Safety Precautions.

E1. <http://www.ermak-center.ru/userfiles/bunn-coffee-maker-nhbx-b-manual.xml>

Main Features. E5. Playing a Builtin Tune. E19. To play back a Song Bank tune. E19. To play back a Piano Bank tune. E20. General Guide. E8. Adjusting the Tempo. E20. Attaching the Score Stand. E9. To pause playback. E20. To fast reverse. E21. Quick Reference. E11. To play the keyboard. E11. To fast forward. E21. Looping a Musical Phrase. E21. Power Supply. E13. To change the melody tone. E21. Using batteries. E13. To play all tunes in succession. E22. Using the AC Adaptor. E14. Using the PIANO BANK Button. E22. Auto Power Off. E14. Advanced 3Step Lesson. E23. Memory Contents. E14. Connections. E15. Evaluation Mode. E24. Using the Lesson Functions and. Connecting to a Computer or Other. Equipment. E15. Microphone Jack. E16. Using the Phrase Practice Mode. E27. Accessories and Options. E16. Voice Fingering Guide. E27. Using the Metronome. E28. Basic Operations. E17. To play the keyboard. E17. Selecting a Tone. E17. Using a Microphone for. Sing Along. E29. Using Tone Effects. E18. Auto Accompaniment. E31. Transposing the Keyboard. E45. Selecting a Rhythm. E31. Using Touch Response. E45. Playing a Rhythm. E32. Adjusting Accompaniment and. Song Bank Volume. E46. Adjusting the Tempo. E32. Using Auto Accompaniment. E32. Tuning the Keyboard. E46. Using a Fillin Pattern. E35. Connection to a. Computer. E47. Using a Rhythm Variation. E35. Connecting to a Computer. E47. Using a Fillin Pattern with a Variation. Rhythm. E35. Expanding the Selections in the. Song Bank Tunes. E48. Synchro Starting Accompaniment with. Rhythm Play. E35. General MIDI Tone. E49. Using an Intro Pattern. E35. Changing the Settings. E49. Finishing with an Ending Pattern. E36. Using Onetouch Preset. E36. Troubleshooting. E51. Song Memory Function. E37. Specifications. E53. Parts and Tracks. E37. Care of your keyboard. E54. Recording Play Along with a. Builtin Tune. E38. Appendix. A1. Playing Back a Lesson Recording. E39. Tone List. A1. Recording a Performance. E39. Drum Assignment List. A6.

Playing Back a Performance. Recording. E41. FINGERED Chord Chart. A7. Rhythm List. A8. Overdubbing a Performance. Recording. E42. Keyboard Settings. E43. Song List. A9. MIDI messages that can be sent Using Layer. E43. Using Split. E43. Using Layer and Split Together. E44. M SpeakerN RHYTHM listO TONE listQ DisplayR PIANO BANK listS CHORD root namesT Percussion instrument list. U Voice 1 to 5V MAIN VOLUME slider. A ONE TOUCH PRESET button. W MODE switch. B TONE button. C RHYTHM buttonD SPEAK button. E METRONOME button. H PRACTICE PHRASE button. I STEP 1 to 3 button. J SCORING 1 to 3 buttonK SPLIT buttonL LAYER buttonInsert the score stand into the slot at the topRear PanelController Indicators. Pressing the SONG BANK, PIANO BANK, or SING ALONG button, or pressing the SONG BANK and PIANO BANK buttons at. This indicates that buttons XRhythm controller indicator. Pressing the RHYTHM button to enter the Rhythm Mode causes the Rhythm controller indicator to light. This indicates thatThe display contrast ofNote that display contrastNumber buttonsWith the 3step lesson feature, the onscreen keyboard guideExample To select "46 ALOHA OE", input 4 and thenA l o h a Oe. Lit. SING ALONG List, and then use the numberThe keys that youA l o h a OeKeyboard key used. IndicatorsNote pitchIf you selected lesson Step 1If you selected lesson Step 2To play an Etude or Concert Piece tuneSONG BANK button. IndicatorsList, and then use the number buttons to input itsThis keyboard can be powered by current from a standardUsing batteries. Always make sure you turn off the keyboard before loadingTo load batteriesLoad 6 Dsize batteries into the batteryImportant Battery Information. Manganese batteries. 9 hours. The above value is standard battery life at normalAlways make sure you observe theMisuse of batteries can cause them to leak resulting inAlways make sure you observe theIf this happens,Using the AC Adaptor. Auto Power Off.

Make sure that you use only the AC adaptor specified for When you are using battery power, keyboard power turns Specified AC Adaptor AD5DC 9V jack To disable Auto Power Off. AC outlet. Note the following important precautions to avoid damage This is normal and does not Hold down the TONE button while turning on the keyboard Memory Contents. Song Memory Contents. Data stored using the song memory function is retained. Electrical Power. The song memory data is retained as long as the keyboard is Unplugging the AC Power Requirements. Note the following precautions whenever you want to ensure Make sure that keyboard power is turned off before replacing Connection Example. PIN plug red Stereo standard plug. PIN jack Standard plug. Keyboard or Connecting to a Computer or. Other Equipment. Audio connection White See "Connecting to a Computer" on page E47 for details. You can connect an optional sustain pedal SP3 or SP20 to To keyboard's Red. PIN plug For details on how to select the pedal function you want, see Connecting headphones cuts off output from the keyboard's Audio Equipment Figure 2. Connect the keyboard to an audio equipment using a See the user documentation that Musical Instrument Amplifier Figure 3. Use a commercially available connecting cord to connect the The wrong type of connector at either end can cause When connected to a musical instrument amplifier, set the Sostenuto Pedal Soft Pedal. Depressing the pedal softens the sound of the notes being In this case, the pedal performs the same functions as the Microphone Jack. You can connect a commercially available microphone to the Along" on page E29. Accessories and Options. Use only the accessories and options specified for this To play the keyboard Example To select "106 ACOUSTIC BASS", input 1, 0 Acous. Bs. Press the POWER button to turn the keyboard on. Set the MODE switch to NORMAL. Use the MAIN VOLUME slider to set the volume Play something on the keyboard. Bank Mode.

The tone that is initially assigned to the If you input one or two See page A6 for details. Selecting a Tone. This keyboard comes with 500 builtin tones. Use the To select a tone For a complete Indicator appears The term polyphony refers to the maximum number of notes The keyboard has 32 note After turning on the effect you want, use the number If you don't, the Effect List. Reverb. Chorus. Using Tone Effects. Reverb Makes your notes resonate. Chorus Adds more breadth to your notes Reverb on. Chorus on. Both on. Both off Builtin tunes are divided between the two groups described below. The tunes in this group are Auto Accompaniment tunes. If The piano tunes in this group are subdivided between 20 In addition to the builtin tunes, you can also play back the To play back a Song Bank tune Example To select "46 ALOHA OE", input 4 and then 6. Song number. Song name. A l o h a Oe SING ALONG List, and note its number. List. Press the SONG BANK button to enter the Song. Bank Mode. Indicators Chord name To play back a Piano Bank tune List, and note its number. Bank group. Adjusting the Tempo. Each tune has a preset default tempo beats per minute that To set the tempo Indicators Flash Example To select tune number 44 Ode To Joy, input O d e To J o y To pause playback Pressing the PAUSE button again resumes play from To fast reverse. Looping a Musical Phrase While a tune is playing or paused, hold down the. REW button to skip in a reverse direction at high When playback is within the measure you want to Beat number To change the melody tone To fast forward FF button to skip forward at high speed. Measure number Example To select "124 VIOLIN", input 1, then 2, then Beat number. Releasing the FF button starts song playback from To play all tunes in succession Pressing the PIANO BANK button provides instant access to Initial Piano Bank Setting. Tone 000 STEREO GRAND PIANO. To use the piano bank Indicators With the 3 Step Lesson System, you can practice builtin tunes Lesson Progress. Step 1. Evaluation 1. Step 2. Evaluation 2.

Step 3. Next Note. An onscreen keyboard guide key flashes to indicate the next Series of Same Pitch Notes. The onscreen keyboard guide key turns off momentarily The staff notation and fingerings also turn off and back on Evaluation 3. Targeted Practice. Example When play requires pressing keys with fingers Current note. The 3step lesson feature takes you through the three distinct Next note. Flash Lit. Flash. Onscreen Display Contents During 3step. Lesson Play. Whenever you select an Auto Accompaniment tune for 3step lesson play, the onscreen keyboard guide and staff Note Pitch. The key you should press lights on the onscreen keyboard The fingers you should use to Bank tunes with

3step lesson Steps 1 and 2. As soonOnly the current finger number isUse the procedure under  
"Adjusting the Tempo" on page E20Note Length. The key stays lit on the onscreen keyboard guide  
for as longThe staff notation andEvaluation Mode. The keyboard's Evaluation Mode awards points to  
yourLesson. A perfect score is 100. Also, the Evaluation ModeEvaluation Results. After you finish  
playing, the keyboard calculates anEvaluation Rank Display Messages and Sound Effects. Evaluation  
Mode Display. Level Indicator 9 Levels This indicator shows the evaluationThe more  
segmentsExample 50 points. Display MessageSound Effect. Applause andApplause only. None.  
NoneUsing Tone and Voice Guide. When the keyboard senses that your timing is off, it will  
letEvaluation Mode, a simulated human voice will also tell youThe sound effect keeps you  
informedEvaluation Mode part way through, the monitor screenUsing the Lesson Functions and.  
Evaluation Mode. Perform the following steps to master your favorite tunes. ExpressionsEvaluation  
RangesTRACK 1 button to specify the part you want toPress the STEP 1 button to start Step 1 play.  
Note pitchA l o h a OeEvaluation 1 Find out how thePress any keyboard keys to play the  
notes.Fingering. Indicator appearsIndicatorsE27 for details. See "Using the Phrase.

Practice Mode" on page E27 for more information.Evaluation 2 Find out how theIndicator appears.  
Bravo !TRACK 1 button to specify the part you want toPress the STEP 2 button to start Step 2 play.A  
l o h a Oe. Play the notes as indicated by the onscreenIndicator appears. FingeringE27 for  
details.Select the tune you want to play. A l o h a Oe. Keyboard keys used. FingeringTo play back the  
practice phraseSTOP button again. Evaluation 3 Find out how theEvaluation Mode.While the Phrase  
Practice Mode screen is on theTo practice the practice phrase. Using the Phrase Practice Mode.  
Perform the following procedure to find out where you scoredPRACTICE PHRASE button.Voice  
Fingering Guide. Voice fingering guide uses a simulated human voice to callVoice Fingering Guide  
calls out fingerings only when you doVoice Fingering Guide. One. Two. Three. Four. FiveForefinger.  
Middle finger. Ring finger. Little fingerTo turn voice fingering guide on or offPress the SPEAK  
button to toggle voice fingering guide onFlash. IndicatorVoice Fingering setting that was in effect  
when youUsing the Metronome. The metronome feature of this keyboard produces a bellIt is the  
perfectTo start the metronomeAccompaniment being played.Bea tThis setting lets youNumber  
buttonsWhen connecting aUsing the microphone jack. When connecting a microphone, be sure to  
first adjust the. MIC VOLUME to a relatively low setting, and then adjust toUse the MIC VOLUME  
knob to adjust microphoneRecommended Microphone Type. Howling Feedback Noise. Any of the  
following conditions can cause howling feedbackShould howling occur, try grasping the microphone  
furtherStatic Noise. Fluorescent lighting can cause static noise in the microphoneTo use a  
microphone for sing alongALONG List, and note its number. List. MIC VOLUME knobAlong Mode.  
IndicatorsExample To select "ALOHA OE", which is song numberMode. The only difference is that  
the melody part inSing Along mode to make sing along easier.

The bass and chordAll of this means that you get full, realistic accompanimentsSelecting a Rhythm.  
This keyboard provides you with 120 exciting rhythms thatTo select a rhythmList and note its  
rhythm number.Pop 1. Indicator appearsExample To select "075 RHUMBA", input 0, 7 and  
thenFINGERED, or FULL RANGE CHORD is selected asPlaying a Rhythm. Using Auto  
Accompaniment. Use the following procedure to start and stop rhythm play. The following procedure  
describes how to use the keyboard's. Auto Accompaniment feature. Before starting, you shouldTo  
play a rhythmTo use Auto AccompanimentFINGERED, or FULL RANGE CHORD.Play a chord.CASIO  
CHORD. Page E33. FINGERED. Page E33. FULL RANGE CHORD. Page E34. The tempo beats per  
minute can be set to a value in theBank, 3step lesson, and Auto Accompaniment chord play,Basic  
Chord Form. Rh umb a. To set the tempoChord name. Metronome. Tempo value. Beat numberSTOP  
button again.For detailsFor details, seeCASIO CHORD Accompaniment Keyboard and Melody.  
Keyboard. AccompanimentMelody keyboardFINGERED Accompaniment Keyboard and Melody.  
AccompanimentChord Types. CASIO CHORD accompaniment lets you play four types ofChord  
TypesExample. Major chords. Major chord names are markedC Major C. Minor chords m. To play a

minor chord, keep the C minor Cm. Seventh chords 7. To play a seventh chord, keep the C seventh C7. Minor seventh chords m7. To play a minor seventh chord, keep C minor seventh Cm7Cdim. FULL RANGE CHORD Accompaniment Keyboard and. Melody Keyboard. Csus4Chord Types. Corresponding. FINGERED Chord. C7sus4. Number of Types Other Chords The lowest note is Any of the fingerings shown in the illustration below will Failure to press even a single key will not play the desired. FINGERED chord. The keyboard interprets any input Any other input that is not a FULL. RANGE CHORD pattern is interpreted as melody play. Because of this, there is no need for a separate accompaniment Using an Intro Pattern. Using a Rhythm Variation.

This keyboard lets you insert a short intro into a rhythm In addition to the standard rhythm pattern, you can also The following procedure describes how to use the Intro To insert an intro To insert the variation rhythm pattern Using a Fillin Pattern with a. Variation Rhythm. You can also insert a fillin pattern while a variation rhythm To insert a fillin into a rhythm variation Fillin patterns let you momentarily change the rhythm The following procedure describes how to use the Fillin To insert a fillin Synchro Starting Accompaniment You can set up the keyboard to start rhythm play at the same The following procedure describes how to use synchro start. Before starting, you should first select the rhythm you want To use synchro start Flash ENDING button one more time. Using Onetouch Preset. Onetouch preset automatically makes the settings listed To use onetouch preset Use the MODE switch to select the accompaniment Press the ONE TOUCH PRESET button. Finishing with an Ending Pattern. You can end your performances with an ending pattern that The following procedure describes how to insert an ending To finish with an ending pattern Pressing the button at any point in the measure after Auto Accompaniment you are using performance recording. Parts and Tracks. How data is recorded to Song Memory and the type of data Using the SONG MEMORY Button. When performing a performance recording or lesson Each press of the SONG. MEMORY button cycles through the song memory options Playback.